

# Series MJC Multiple Jet Controls DN20, DN25, DN40, and DN50, 12 bar BSPT Inlet & Outlets Threads

#### **IMPORTANT**

Refer to Technical Data Sheet TFP2300 for warnings pertaining to regulatory and health information.

Always refer to Technical Data Sheet TFP700 for the "INSTALLER WARNING" that provides cautions with respect to handling and installation of sprinkler systems and components. Improper handling and installation can permanently damage a sprinkler system or its components and cause the sprinkler to fail to operate in a fire situation or cause it to operate prematurely.

Scan the QR code or enter the URL in a web browser to access the most up-to-date electronic version of this document. Data rates may apply.



docs.jci.com/tycofire/tfp1346

# General Description

The TYCO Series MJC Multiple Jet Controls are control valves with self-contained heat actuating units. Available in DN20 through DN50 pipe sizes, they are designed for use as the system control valve for fire protection systems of limited size, where the MJCs are located within the protected area. Upon operation, the MJCs permit a flow of extinguishing medium (usually water) through open spray devices, such as nozzles or non-automatic (open) sprinklers.

The MJCs are typically used as an auxiliary deluge valve to control the flow of

water to specific areas within a larger wet pipe, dry pipe, or deluge system. As such, they can be used with supply piping from either a wet pipe system, see Figure 1, or a dry pipe or deluge system, see Figure 2.

In all cases, waterflow alarms are provided by the main automatic control valve supplying the MJCs, for example, alarm valves, dry pipe valves, or deluge valves.

For smaller design areas, the MJCs serve as an individual heat activation point and control valve, see Figures 1A and 2A. For larger design areas, the MJCs can be set up to provide multiple heat activation points, while still providing water flow through all discharge points with the activation of only one MJC, see Figures 1B and 2B. In this example, water flows through the nonoperated MJC from outlet to outlet as shown in Figure 8.

## **Features**

- Available in four pipe sizes
- Fully automatic using proven frangible glass bulb as the heat detection medium
- Installed upright (heat sensitive bulb at top) for water supplies from either a dry pipe or deluge system or pendent (heat sensitive bulb at bottom) for a water supply from a wet system
- Defined areas of protection to provide total coverage of specific zones
- DN25, DN40, and DN50 provided with protective guard

## NOTICE

The TYCO Series MJC Multiple Jet Controls described herein must be installed and maintained in compliance with this document, as well as with the applicable standards recognized by the Approval agency, in addition to the standards of any authorities having jurisdiction. Failure to do so may impair the performance of these devices.

The owner is responsible for maintaining their fire protection system and devices in proper operating condition. Contact the installing contractor or product manufacturer with any questions.



# Technical Data

## **Approvals**

LPCB Approved See Tables A, B, C, and D

Working Pressure Range 1,4 to 12,0 bar

## Temperature Ratings See Tables A, B, C, and D

# Pressure Loss

See Graphs A and B

# Construction

The TYCO Series MJC Multiple Jet Controls are manufactured from cast iron, leaded gun metal, copper, brass, nickle silver, and glass, see Figures 3, 4, 5, and 6

# Design Criteria

## **Ambient Temperature**


For normally wet pipe systems, do not install TYCO Series MJC Multiple Jet Controls in areas that are subject to freezing.


# **Water Supply**


Water should be free of particles and/ or site debris. Do not use sea or brackish water.


# **Piping Arrangements**


A "wet supply line" is typically being supplied from an alarm valve, see Figure 1, and the "dry supply line" is typically being supplied from either a dry pipe valve or deluge valve, see Figure 2. Waterflow alarms, system pressure gauges, and flow test capability are therefore provided by the alarm, dry pipe, or deluge valve.

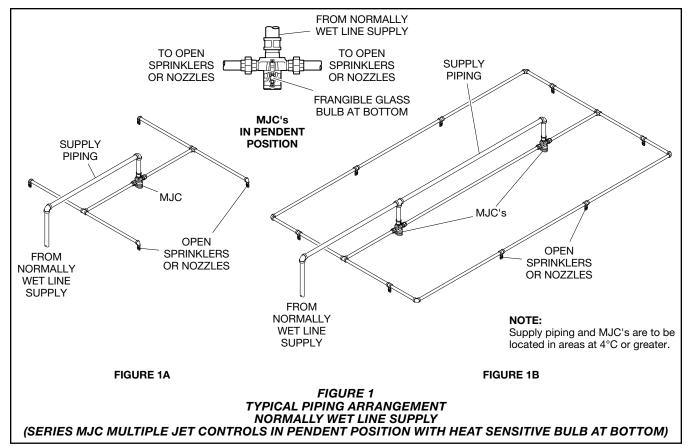


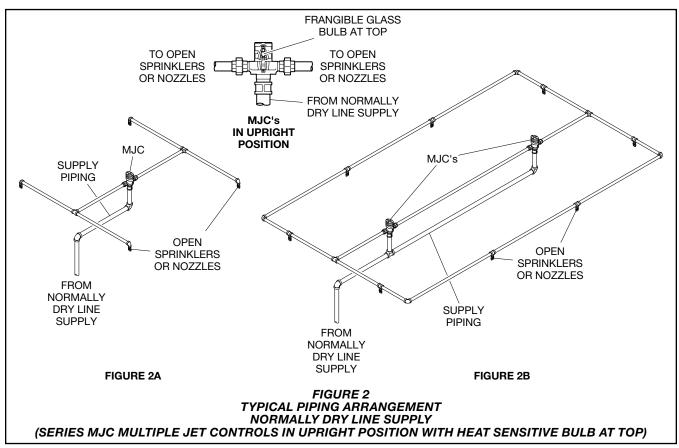


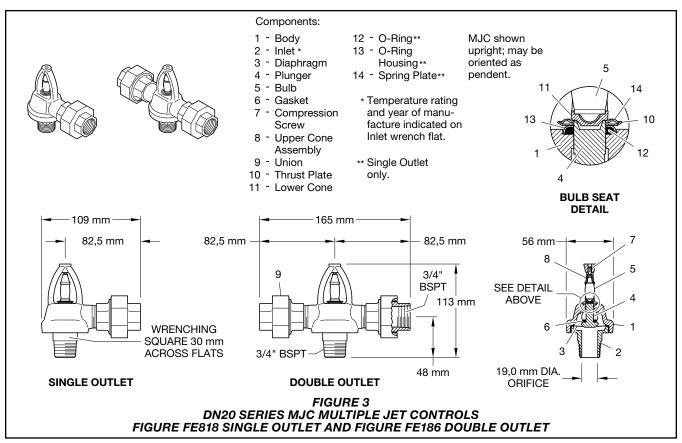


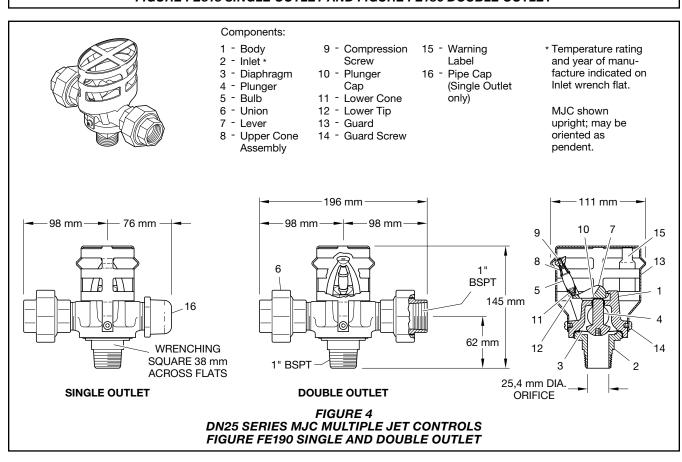


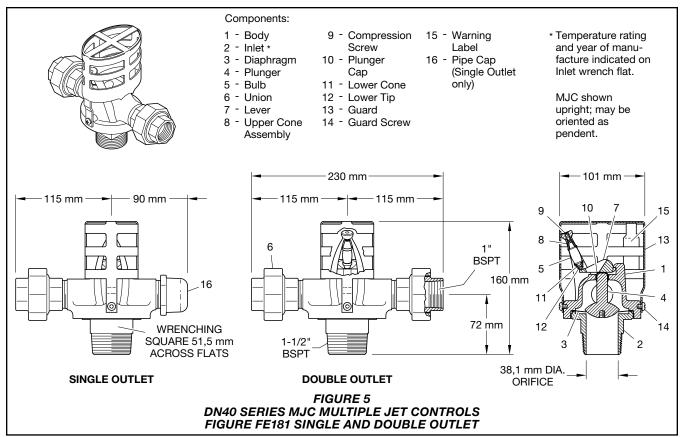

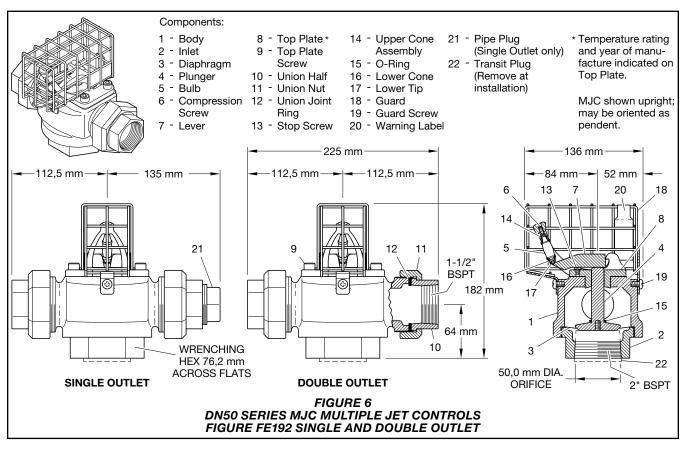

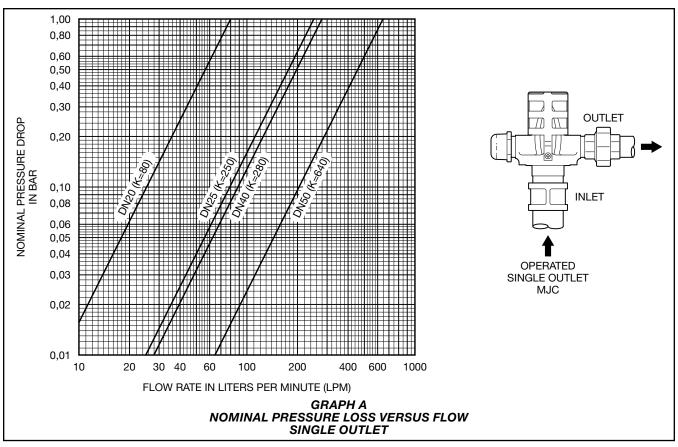

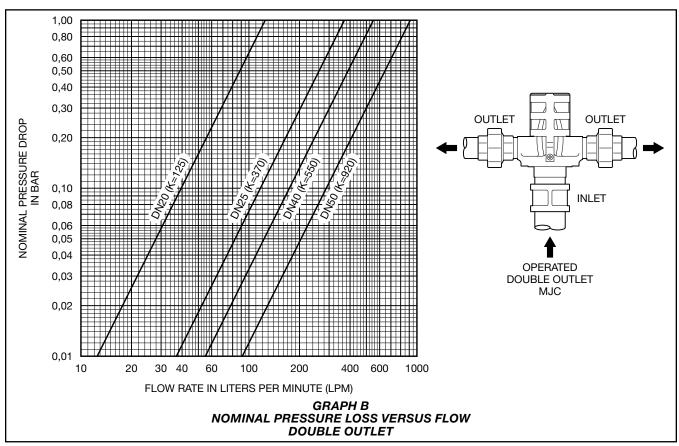

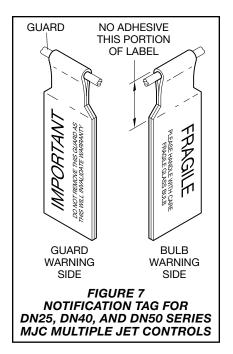


#### **Sequence of Operation**

- For a wet pipe system supply, water is readily available for flow through the MJCs; however, water is only allowed past the MJCs when the glass bulb in the MJCs is actuated by heat.
- For a dry pipe system supply, operation of the glass bulb in the MJCs when actuated by heat releases air pressure to permit operation of a dry pipe valve, and then upon operation of the dry pipe valve, water becomes available to flow through the operated MJCs.
- For a deluge system supply and upon operation of the deluge system in response to a dedicated supplemental detection system, water becomes available to the MJCs; however, water is only permitted past the glass bulb in the MJCs if the glass bulb has been actuated by heat.

# **MJC Installation Position**

The MJCs is installed in the upright position, heat sensitive bulb at top as illustrated in Figures 3, 4, 5, and 6, when supplied from a dry pipe or deluge system, or can be installed in the pendent position for a wet pipe system supply, heat sensitive bulb at bottom. For example, in a wet pipe system supply, the MJCs can be installed above a ceiling where its heat sensitive bulb is exposed below the ceiling line. In all cases, the heat sensitive bulb must be in the protected area.

Since the MJCs utilize a thermal sensing element similar to that used for a standard response, standard coverage, frangible glass bulb type sprinkler, the positioning rules for MJCs are the

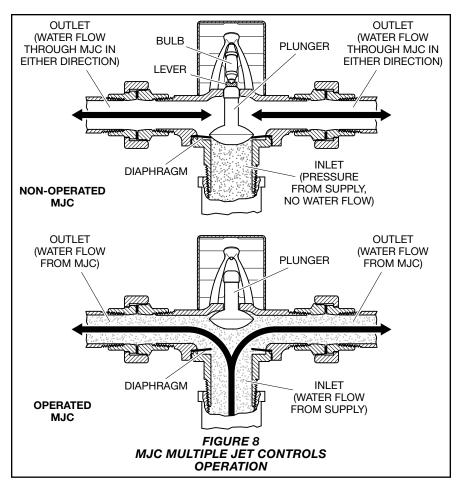

same as standard sprinklers. The heat sensitive bulb to ceiling distance and the area of thermal coverage is based on standard coverage sprinklers as a function of the protected hazard and ceiling construction provided in the applicable standards recognized by the Approval agency for standard coverage sprinklers.

#### **Pressure Loss**

Graph A provides the pressure loss versus flow for the MJC configured as a single outlet, and Graph B provides the pressure loss versus flow for the MJC configured for double outlets.

# **Operation**

The DN20 TYCO Series MJC Multiple Jet Control has an inlet connected to either a single or double outlet, see Figure 3. For the DN25, DN40, and DN50 MJCs, the central inlet is connected to the double outlets, see Figures 4, 5, and 6. Using a cap instead of one of the two unions on the DN25 and DN40 sizes or plugging one of the two unions on the DN50 size will convert a double outlet MJC into a single outlet, see Figures 4, 5, and 6. In all cases, the inlet is sealed from the outlet(s), and there is a normally open

flow path from the outlet-to-outlet of double outlet MJCs, see Figure 8.

In the standby mode, the system supply is sealed by the diaphragm that is restrained by the plunger. In the DN20 assembly, the plunger is held in position directly by the frangible glass bulb. In the DN25, DN40, and DN50 assemblies, the plunger is indirectly held in position by the frangible bulb and the lever arm, see Figures 3, 4, 5, and 6.

The frangible glass bulb contains a liquid that has a freeze-point below -50°C and a high coefficient of expansion. A predetermined amount of vapor is hermetically sealed within the glass bulb. The liquid naturally expands under the influence of increasing temperature as occurs in the event of a fire, thus increasing the internal pressure within the glass bulb until the vapor is absorbed and subsequently shatters the glass bulb allowing the MJCs to open. The temperature at which this happens is determined by the amount of vapor held within the glass bulb, thus the operating temperature of the MJCs can be accurately controlled, see Figures 3, 4, 5, and 6.

In the event of a fire the frangible glass bulb shatters and directly releases the plunger valve of the DN20 MJCs

DN	FIGURE NUMBER and STYLE	APPROVALS	TEMPERATURE RATING	MAXIMUM TEMPERATURE WHERE MJC IS LOCATED	BULB LIQUID COLOR	PART NUMBER
	FIGURE FE818 SINGLE OUTLET	2	57°C	27°C	Orange	MJCSO0027A
			79°C	49°C	Yellow	MJCSO0027D
			93°C	63°C	Green	MJCSO0027E
20			141°C	111°C	Blue	MJCSO0027G
20	FIGURE FE186 DOUBLE OUTLET	1	57°C	27°C	Orange	MJCDO0027A
			79°C	49°C	Yellow	MJCDO0027D
			93°C	63°C	Green	MJCDO0027E
			141°C	111°C	Blue	MJCDO0027G <sup>3</sup>

#### NOTES

- 1. Approved by the Loss Prevention Certification Board (LPCB Refer to No. 007f/01)
- 2. Approved by the Loss Prevention Certification Board (LPCB Refer to No. 007f/02)
- 3. Available in EMEA and APAC markets only

TABLE A LABORATORY LISTINGS AND APPROVALS AND PART NUMBERS FOR DN20 SERIES MJC MULTIPLE JET CONTROLS

or indirectly releases the plunger by releasing the lever arm of the DN25, DN40, or DN50 MJCs. This action in turn allows water pressure to lift the diaphragm and allow water pressure to pass through to the distribution piping and water distribution devices onto the fire, see Figures 3, 4, 5, and 6.

# Installation

The TYCO Series MJC Multiple Jet Controls must be installed per the system designer's specifications, which have been based on the information provided in the Design Criteria section.

Exercise care to avoid damage to the MJCs before, during, and after installation. Replace MJCs damaged by dropping, striking, wrench twist/slippage, or the like. Also, replace any MJCs that have a cracked bulb or that has lost liquid from its bulb. The DN25, DN40, and DN50 MJCs are provided with a Notification Tag (Figure 7).

Do not install a MJC if the bulb is cracked or there is a loss of liquid from the bulb. With the MJC held so that the bulb is horizontal, a small air bubble should be present. The diameter of the air bubble is approximately 4,5 mm to 6,4 mm.

The MJCs utilize a frangible glass bulb heat sensitive element. Handle with care. The DN25, DN40, and DN50 MJCs are provided with a guard. Removal of the guard voids the manufacturer's warranty.

# Care and Maintenance

Before closing a fire protection system main control valve for maintenance work on the fire protection system that it controls, obtain permission to shut down the affected fire protection systems from the proper authorities and notify all personnel who may be affected by this decision.

After a fire, replace all TYCO Series MJC Multiple Jet Controls that have operated with new MJCs of the same type and temperature rating. Complete the replacement as soon as possible and after the system is drained. Spare MJCs should be kept on site at all times to ensure replacements are installed with minimum of delay.

Never paint, plate, or coat, or otherwise alter MJCs after they leave the factory. Modified MJCs must be replaced. MJCs that have been exposed to corrosive products of combustion, but have not operated, should be replaced if they cannot be completely cleaned by wiping the MJCs with a cloth or by brushing it with a soft bristle brush.

Exercise care to avoid damage to the MJCs before, during, and after installation. MJCs damaged by dropping, striking, wrench twist/slippage, or the like, must be replaced.

Inspection, testing, and maintenance must be performed in accordance with the requirements of the authority having jurisdiction, and any impairment must be immediately corrected. MJCs that are found leaking or exhibiting visible signs of corrosion must be replaced. Also, replace any MJCs that have a cracked bulb or that has lost liquid from its bulb. (Refer to Installation Section.)

Inspections will be limited to a visual inspection as would be performed for automatic sprinklers and at a frequency as required for automatic sprinklers. The TYCO Series MJC Multiple Jet Controls, by the nature of their design, cannot be trip tested.

The owner is responsible for the inspection, testing, and maintenance of their fire protection system and devices in compliance with this document, as well as with the applicable standards of any authorities having jurisdiction. Contact the installing contractor or product manufacturer with any questions.

Automatic sprinkler systems should be inspected, tested, and maintained by a qualified Inspection Service in accordance with local requirements and/or national codes.

DN	FIGURE NUMBER and STYLE	APPROVALS	TEMPERATURE RATING	MAXIMUM TEMPERATURE WHERE MJC IS LOCATED	BULB LIQUID COLOR	PART NUMBER DOUBLE OUTLET	PART NUMBER SINGLE OUTLET
25	FIGURE FE190 DOUBLE OUTLET	N/A	57°C	27°C	Orange	MJCDO0034A <sup>2</sup>	MJCSO0034A
			79°C	49°C	Yellow	MJCDO0034D	MJCSO0034D
	WITH GUARD	N/A	93°C	63°C	Green	MJCDO0034E	MJCSO0034E
			141°C	111°C	Blue	MJCDO0034G	MJCSO0034G

#### NOTES:

- 1. Approved by the Loss Prevention Certification Board (LPCB Refer to No. 007f/03)
- 2. Available in EMEA and APAC markets only

N/A: Not Approved

## **TABLE B** LABORATORY LISTINGS AND APPROVALS AND PART NUMBERS FOR DN25 SERIES MJC MULTIPLE JET CONTROLS

DN	FIGURE NUMBER and STYLE	APPROVALS	TEMPERATURE RATING	MAXIMUM TEMPERATURE WHERE MJC IS LOCATED	BULB LIQUID COLOR	PART NUMBER DOUBLE OUTLET	PART NUMBER SINGLE OUTLET
40	FIGURE FE181 DOUBLE OUTLET WITH GUARD	N/A	57°C	27°C	Orange	MJCDO0048A	MJCSO0048A
		N/A	79°C	49°C	Yellow	MJCDO0048D	MJCSO0048D
			93°C	63°C	Green	MJCDO0048E <sup>2</sup>	MJCSO0048E
			141°C	111°C	Blue	MJCDO0048G <sup>2</sup>	MJCSO0048G

#### NOTES:

- 1. Approved by the Loss Prevention Certification Board (LPCB Refer to No. 007f/03)
- 2. Available in EMEA and APAC markets only

N/A: Not Approved

## **TABLE C** LABORATORY LISTINGS AND APPROVALS AND PART NUMBERS FOR DN40 SERIES MJC MULTIPLE JET CONTROLS

DN	FIGURE NUMBER and STYLE	APPROVALS	TEMPERATURE RATING	MAXIMUM TEMPERATURE WHERE MJC IS LOCATED	BULB LIQUID COLOR	PART NUMBER DOUBLE OUTLET	PART NUMBER SINGLE OUTLET
50	FIGURE FE192 DOUBLE OUTLET WITH GUARD	N/A	57°C	27°C	Orange	MJCDO0060A	MJCSO0060A
		N/A	79°C	49°C	Yellow	MJCDO0060D <sup>2</sup>	MJCSO0060D
			93°C	63°C	Green	MJCDO0060E <sup>2</sup>	MJCSO0060E
			141°C	111°C	Blue	MJCDO0060G	MJCSO0060G

### NOTES:

- Approved by the Loss Prevention Certification Board (LPCB Refer to No. 007f/03)
  Available in EMEA and APAC markets only

N/A: Not Approved

TABLE D LABORATORY LISTINGS AND APPROVALS AND PART NUMBERS FOR DN50 SERIES MJC MULTIPLE JET CONTROLS

# Limited **Warranty**

For warranty terms and conditions, visit www.tyco-fire.com.

# **Ordering Procedure**

Contact your local distributor for availability. When placing an order, indicate the full product name and Part Number (P/N).

# **Multiple Jet Control**

Specify: TYCO Series MJC Multiple Jet Control, Figure (specify), Size (specify), (specify) Temperature Rating), P/N (specify from Tables A, B, C, or D)

